

Tantalum(V) Oxide Patinal®

GENERAL INFORMATION

Tantalum(V) Oxide Patinal® forms hard and environmentally stable films on glass and plastic substrates with low absorption over a broad spectral range from the UV to the SWIR. It shows considerably less absorption than TiO₂ and an adjustable stress level depending on coating conditions. It is therefore especially suitable for laser coatings with an extensively high number of layers.


AREAS OF APPLICATION

- High quality AR and other optical multilayer coatings for UV, VIS and NIR on glass, crystalline substrates and polymers
- Coatings for laser applications with strong requirements on laser damage threshold
- High precision filters with low absorption levels
- Protective and reflection enhancing coatings on metals in combination with e.g. SiO₂

THIN FILM PROPERTIES

Range of transparency	350 – 7000 nm
Refractive index at 500 nm	
Conventional, T _s = 300 °C / no IAD	~ 2.10
IAD, T _s = RT	~ 2.15
Thin film stress	
Conventional, T _s = 300 °C / no IAD	Tensile
IAD, T _s = RT	Compressive



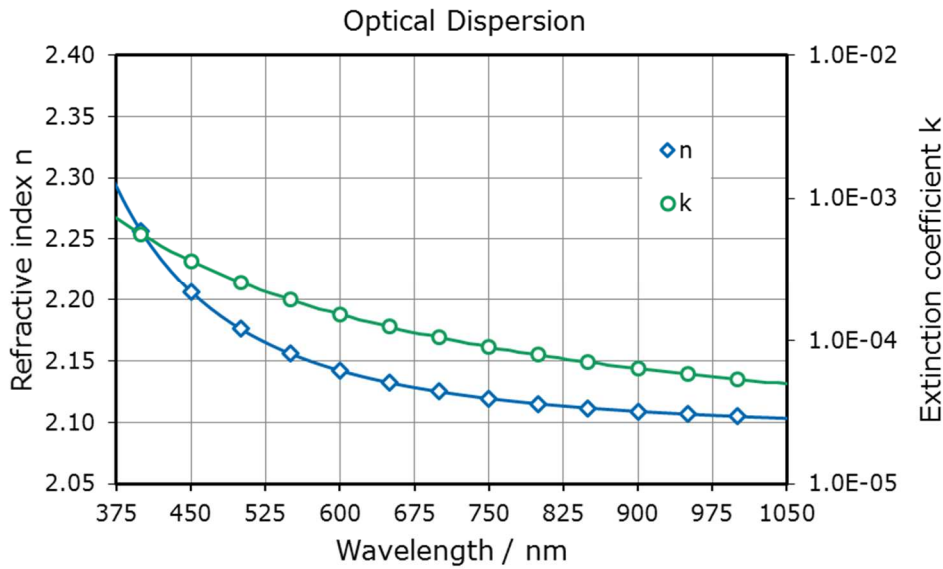

wavl / nm	350	400	500	750	900	1050	1200
n	2.34	2.26	2.17	2.12	2.11	2.10	2.10
k	1.0E-03	5.6E-04	2.6E-04	9.0E-05	6.4E-05	5.5E-05	4.1E-05

The resulting optical properties of the thin film are dependent on process conditions like deposition rate and substrate temperature.



NOTES FOR EVAPORATION

Evaporator source	Electron beam evaporator
Liner	Copper crucible
Evaporation temperature	2000 – 2200 °C
Deposition rate	0.2 – 0.4 nm/s
Oxygen partial pressure	about $1 \cdot 10^{-4}$ mbar
Substrate temperature	Conventional: 150 – 300 °C IAD: 100 – 200 °C
IAD settings (Leybold APS)	100 – 120 V Bias, 30 – 40 sccm O ₂
QCR-settings	Density 8.20 g/cm ³ , z-ratio 0.3

Usually Ta₂O₅ is premelted under a shutter. The deposition should be carried out reactively with addition of oxygen. During melting and at the beginning of the evaporation of Ta₂O₅, oxygen is released which causes a temporary increase of the chamber pressure.

Under optimized conditions layers without optical absorption in the visible can be produced. However, in some cases, e.g. at higher substrate temperature or after several consecutive evaporations from one crucible without replenishment of material, Ta₂O₅ layers show absorption. At least partial removal of this absorption can be achieved by heat-treatment, e.g. baking the coatings for 1 hour at temperatures >300 °C in air.



PRODUCTS

Tantalum(V) Oxide Patinal® is available as granules and tablets.

Product Code	Description	Purity*	Dimensions
1.08500	Tantalum(V) Oxide Granules Patinal®	≥ 99.95 % (3N5)	Granules, about 1 – 4 mm
1.08172	Tantalum(V) Oxide Tablets Patinal®	≥ 99.95 % (3N5)	Tablets, about 0.5 g, Ø 6.3 mm x h 3 mm

* The purity values are based on the specified trace metals.

Appearance

1.08500	white granules
1.08172	white disk

SPECIFICATION

Cobalt (Co)	≤ 0.001 %
Copper (Cu)	≤ 0.001 %
Chromium (Cr)	≤ 0.002 %
Iron (Fe)	≤ 0.005 %
Vanadium (V)	≤ 0.005 %

Sizes

1.08500	Granules 1- 4 mm ≥ 80 %
1.08172	h = 2.7 – 3.3 mm Ø = 5.9 – 6.7 mm

RoHS information

The RoHS compliance information is part of the Certificate of Analysis (CoA) for each batch of Patinal® material.

Application test

Each batch has to pass a specific application test assessing its evaporation behaviour.

Tantalum is a material included on the list of "conflict minerals" mentioned in the Dodd-Franck Wall Street Reform and Consumer Protection Act, Section 1502, "Conflict Mineral Law". Merck complies to the Dodd-Franck Act and buys raw material for this article only from certified smelters. For further reference please review the information on www.conflictreesourcing.org.



Date of Issue: 12 / 2021, Page 4 of 5

EMD Electronics

The Electronics Business of Merck KGaA, Darmstadt, Germany operates as EMD Electronics in the U.S and Canada.

mail: photonicsUS@emdgroup.com / web: patinal.com



Quality assurance

Research, production and sales of our Patinal® evaporation materials take place under a certified DIN EN ISO 9001 quality management system and DIN EN ISO 14001 environmental management system. The quality of the materials is assured by our manufacturing processes, in-process controls and quality tests. Each batch is released only after passing our chemical analysis and application tests designed to confirm the suitability of the material for the evaporation process.

Handling precautions

Product safety information required for safe use is not included in this document. Before handling, read product and safety sheets and container labels for safe use, physical and health hazard information. The material safety data sheet is available online at www.patinal.com, from your EMD representative or distributor, or by calling your global Merck KGaA, Darmstadt, Germany, contact.

Disclaimer

Products are warranted to meet the specifications set forth on their label/packaging and/or certificate of analysis at the time of shipment or for the expressly stated duration. EMD PERFORMANCE MATERIALS CORP. MAKES NO REPRESENTATION OR WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE REGARDING OUR PRODUCTS OR ANY INFORMATION PROVIDED IN CONNECTION THEREWITH. Customer is responsible for and must independently determine suitability of our products for its intended use and processes, including the non-infringement of any third parties' intellectual property rights. EMD Performance Materials Corp. shall not in any event be liable for incidental, consequential, indirect, exemplary or special damages of any kind resulting from any use or failure of the products: All sales are subject to our complete Terms and Conditions of Sale. Prices are subject to change without notice. EMD Performance Materials Corp. reserves the right to discontinue products without prior notice.

© 2021 Merck KGaA, Darmstadt, Germany and/or its affiliates. EMD Electronics, the vibrant M, Patinal are trademarks of Merck KGaA, Darmstadt, Germany or its affiliates.



Date of Issue: 12 / 2021, Page 5 of 5

EMD Electronics

The Electronics Business of Merck KGaA, Darmstadt, Germany operates as EMD Electronics in the U.S and Canada.

mail: photonicsUS@emdgroup.com / web: patinal.com

