

# Formulation Example

## S 25-2-63 Vitamin for Skin Unexpected Drops

### Ingredients

	INCI US	[%]
<b>A</b>		
Xirona® Le Rouge	(1) IRON OXIDES (AND) SILICA	0.80
Xirona® Nordic Sunset	(1) SILICA (AND) TITANIUM DIOXIDE (AND) TIN OXIDE	1.20
<b>B</b>		
RonaCare® Luremin®	(1) SORBITOL (AND) DIHYDROXY METHYLCHROMONE	2.00
RonaCare® Ectoin IQ	(1) ECTOIN	0.50
RonaCare® Sodium Benzoate	(1) SODIUM BENZOATE	0.50
RonaCare® Potassium Sorbate	(1) POTASSIUM SORBATE	0.50
Glycerol anhydrous (vegetable) EMPROVE® bio	(1) GLYCERIN	3.00
Original Extract Grapefruit	(2) CITRUS GRANDIS (GRAPEFRUIT) FRUIT WATER	6.00
Dermofeel® PA-12	(3) SODIUM PHYTATE	0.10
Water, demineralized	WATER	ad 100.00
<b>B1</b>		
Actigum™ VSX 20	(4) XANTHAN GUM (AND) SCLEROTIUM GUM	0.75
<b>C</b>		
RonaCare® ReviMer	(1) WATER (AND) FUCUS SERRATUS EXTRACT (AND) BENZYL ALCOHOL (AND) DEHYDROACETIC ACID	1.50
Durosoft PG-4L-SG	(5) POLYGLYCERYL-4 LAURATE	3.00
Citric acid, 30% solution	WATER (AND) CITRIC ACID	q.s.
Preservatives		q.s.

### Procedure:

Add Dermofeel PA-12 in the water of phase B at room temperature and stir until dissolved. Adjust pH to 5.5 with citric acid solution. Then add the other ingredients of phase B at room temperature while stirring until dissolved. Disperse B1 into phase B while stirring. Homogenize with Ultra Turrax T-50 at 5.000 rpm for 7 minutes. Add phase C while gently stirring. Add phase A until pigments are well dispersed, check pH value and adjust to 5.5, if necessary.

### Notes:


Shake before use!

Store at room temperature (15-25°C)

### Suppliers:

(1) Merck Electronics KGaA / EMD Performance Materials Corp.  
(3) Evonik Nutrition & Care GmbH  
(5) Stephenson Personal Care

(2) Gattefossé (Deutschland) GmbH  
(4) Univar GmbH

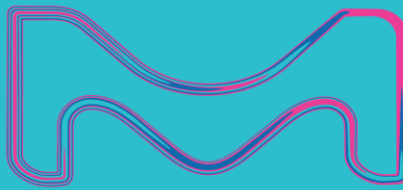

# Formulation Example

Products are warranted to meet the specifications set forth on their label/packaging and/or certificate of analysis at the time of shipment or for the expressly stated duration. EMD Performance Materials Corp. provides information and advice on application technologies and relevant regulations based upon its current knowledge and opinion. EMD PERFORMANCE MATERIALS CORP. MAKES NO REPRESENTATION OR WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE REGARDING OUR PRODUCTS, THEIR APPLICATION OR ANY INFORMATION PROVIDED IN CONNECTION THEREWITH. EMD Performance Materials Corp. shall not in any event be liable for incidental, consequential, indirect, exemplary or special damages of any kind resulting from any use or failure of the products. Customer is responsible for and must independently determine the suitability of our products for its intended use and processes. The foregoing information and suggestions are also provided without warranty of non-infringement as to intellectual property rights of third parties and shall not be construed as any inducement to infringe the rights of third parties. Customer shall be responsible for obtaining any applicable third party intellectual property licenses. All sales are subject to our complete Terms and Conditions of Sale. Prices are subject to change without notice. EMD Performance Materials Corp. reserves the right to discontinue products without prior notice.

© 2023 Merck KGaA, Darmstadt, Germany and/or its affiliates. EMD Electronics, the vibrant M, Colorona, Timiron, Xirona, RonaFlair, Ronastar, Ronaflex,